



**Read Manual
Before Use:**



Before Use Checklist:

- 1 Check Battery. Ensure battery is fully charged. Charge to 100% before first use or after long storage; recharge every 60 days.
- 2 Choose the correct brush or pad and chemical for your floor type.
- 3 Ensure the recovery tank is completely empty.
- 4 Fill Clean Water Tank with clean water and low-foaming chemical as required.
- 5
 - Confirm the squeegee is clean and in good condition.
 - Lock up for double scrubbing (see manual image).
 - Lower for dirty water collection via the vacuum system.
 - Check for the correct bend in squeegee (refer to manual image).
- 6 Start Machine - Press Power while holding both hands on the handle.
- 7 Set Brush Speed, adjust speed to match floor conditions.
- 8 Set Water Flow, press the Water button and select level 1, 2, or 3.




After use procedure:

- 1 Power Off Safely - Press Off, continue moving forward until the machine stops.
- 2 Fold the chrome handle and lock it in place.
- 3 Empty & Rinse Tanks - Remove, empty, and rinse the dirty water tank and safety basket.
- 4 Check Battery Level - Note remaining charge before storing.
- 5 Clean Squeegee - Remove debris with a brush or cloth.
- 6 Inspect Brush/Pad - Clean or replace for next use.
- 7 Wipe Down Machine - Use a damp cloth only. Do not spray water directly.



Dash control board:

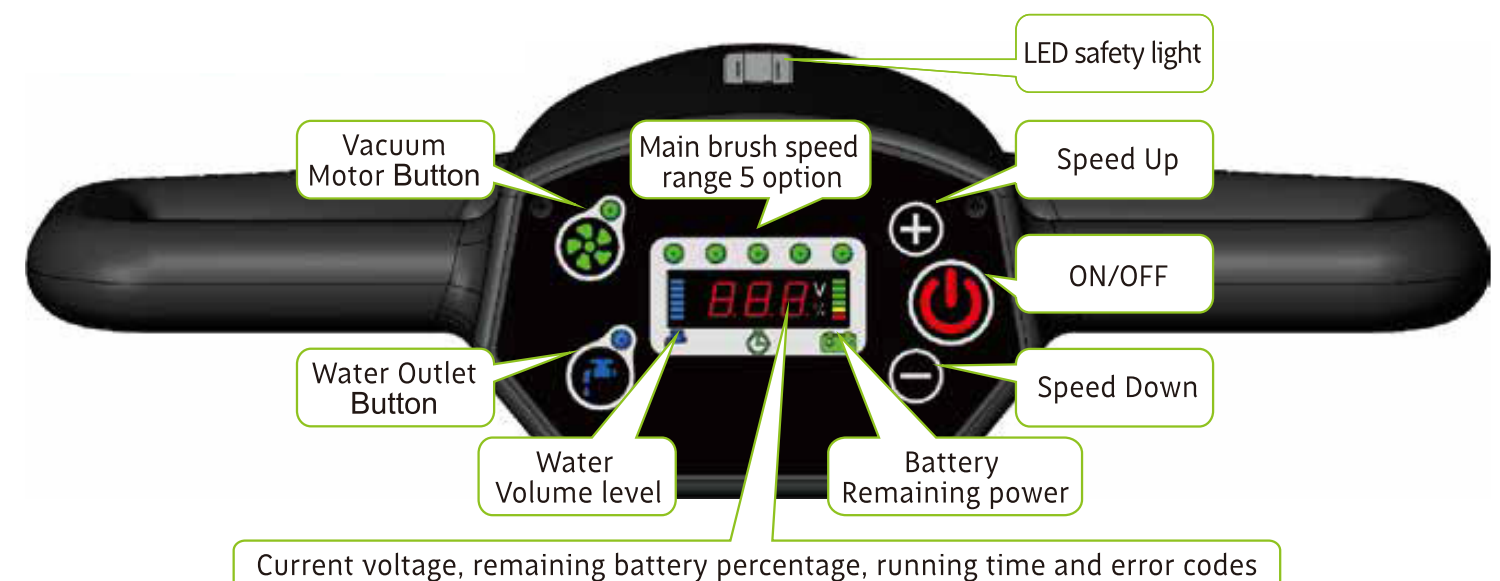

IMPORTANT NOTES:

- ! **Squeegee Blade:** Double-sided and four-way usable for long life and reduced cost.
- ! Do **NOT** start while charging.
- ! **Troubleshooting:** Scan QR code for full manual and support.

Book a Service or Repair:

