



## Viper AS380B Battery Use and Care

- Ensure machine PCB and charger settings are correct for battery type
- Ensure machine is fully charged before using
- Do not use machine after red battery LED is lit, stop using machine and put on charge
- Do not over discharge batteries
- Allow charger to complete a full charge cycle, do not opportunity charge
- Charge cycle is complete when green LED is lit on charger
- Charge the batteries after every use
- Charge batteries in a cool, ventilated room. Empty and remove recovery tank when charging
- Visually check batteries and cables. Check cable terminal connections for tightness
- Do not charge the batteries if the battery charger cable or the plug are damaged
- Refer to user manual for battery level display and charger status LED location
- Refer to user manual for warnings and troubleshooting
- If machine is not in use for extended periods, disconnect battery connector. Charge the batteries every 30 days to maintain battery life

Model	Battery Type	Estimated run Time	Recharge time
AS380B	DC35-12A Battery (x2)	60 mins	10-12 hrs

\*\*\* Note run times are an estimation only as run times can be affected by - floor condition, floor type, brush type, water levels, overall battery condition, machine usage and charging patterns, and operating/charging temperatures\*\*\*

If the machine has been used until the Red light illuminates on the battery level indicator on the machine, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this this procedure may cause damage to the batteries.