




ReadyDose™ Presoak Tablet

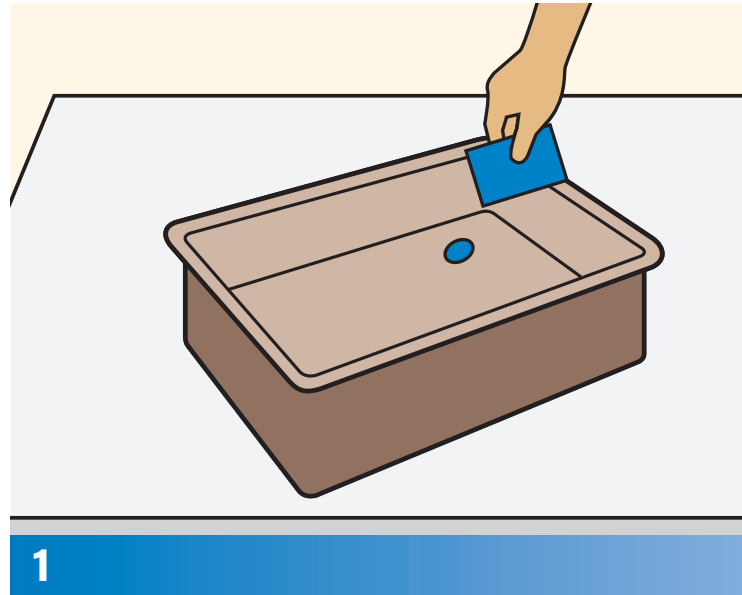


Tear open a packet and drop the tablet into presoak tub.

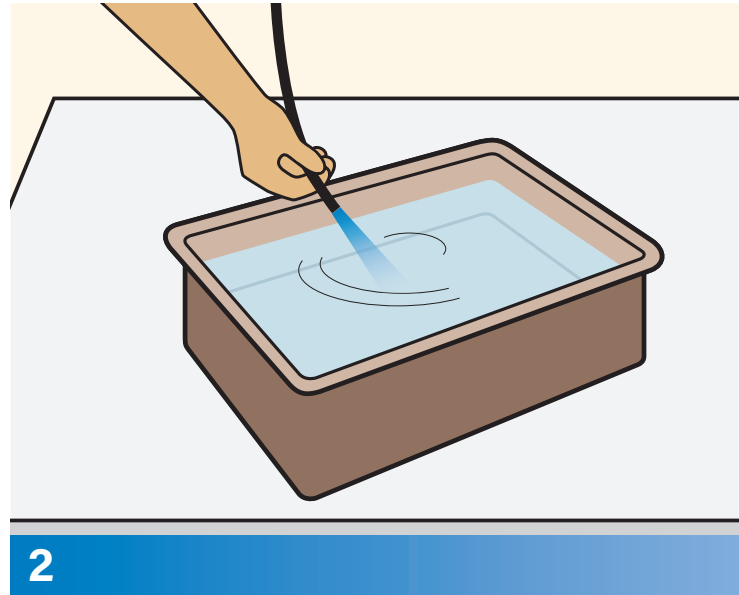

Fill the tub with warm water (43 - 49° C) and allow tablet to dissolve.

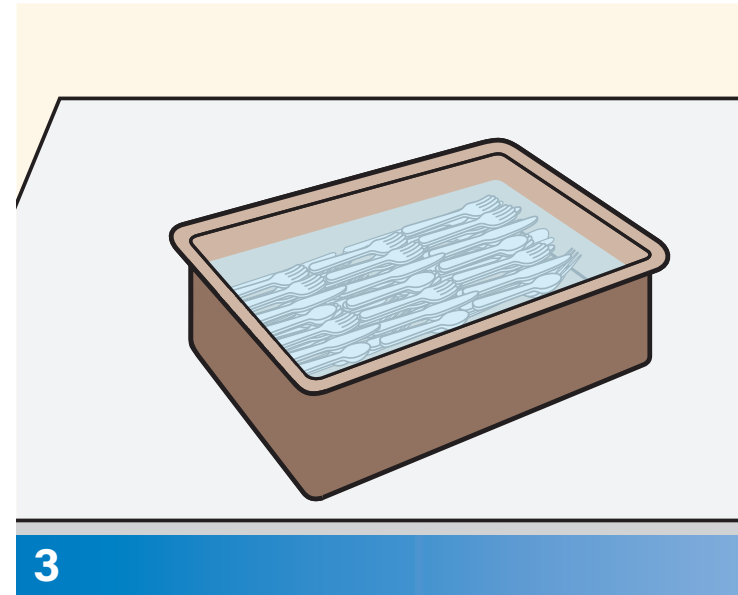

Place dirty flatware into solution and allow to soak.

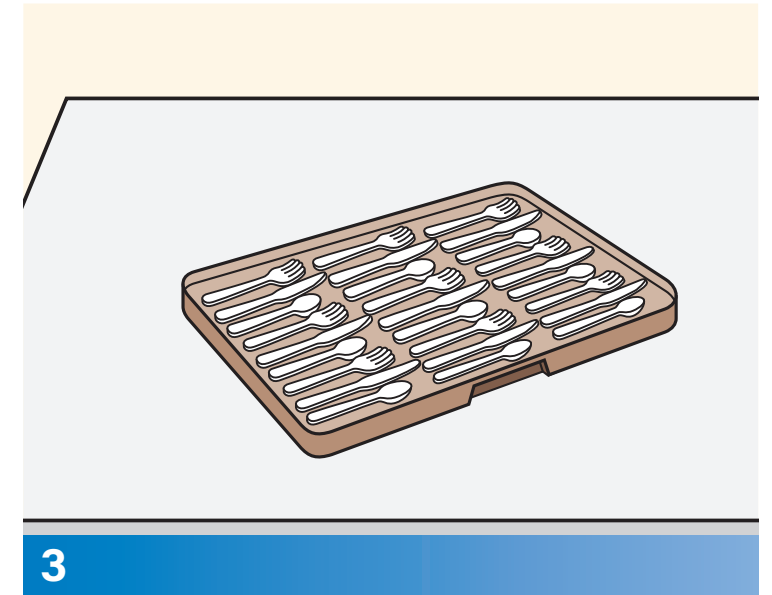

Remove flatware from presoak solution, rinse, and wash in regular manner before the surface dries.

